

# ADB (BLACK) REMOTE FOR ADB SETTOPS - POWER, VOLUME & ADVANCED CODE SEARCH METHOD

## 1. CODE SEARCH METHOD

- Turn on your television
- PRESS and release the **TV** button

*The next four steps need to be done quickly.*

- PRESS and **HOLD** the **RCU SETUP** until the **TV** button blinks twice
- Enter in **9 9 1** and the **TV** button will blink twice
- Aim the remote at the TV and press and release the **POWER** button
- PRESS and RELEASE the **CH+** button slowly until the TV turns off. You must do it slow enough to react when your TV shuts off. Be patient, you may have to hit **CH+** or **CH-** multiple times.
- PRESS the **POWER** button to turn the TV on
- PRESS the **RCU SETUP** button to store the code for the TV. The TV button will blink twice. The remote is now ready to operate the TV.

## 2. LOCK POWER BUTTON FOR TV

- Turn on your television
- Press and release the **STB** button
- Press and hold the **RCU SETUP** button until the TV button blinks TWICE
- Enter in **9 9 5**
- Press and release the **POWER** button
- Press and release the **TV** button
- Press and hold the **RCU SETUP** button until the **STB** button blinks twice







# AMINO REMOTE FOR AMINO SET TOP BOXES

## OPERATION

When the remote control is first operated, all buttons transmit commands for the set-top box. Point the remote control toward the front of the set-top box when pressing a button to ensure correct operation. Do not cover the IR window at the front of the product.

When a button on the remote is pressed, either the set-top box standby button will flash (or TV standby button if a TV brand has been entered) depending on which product is being controlled by the remote control.


If a button is pressed for more than 30 seconds, the remote control will stop transmitting commands in order to preserve battery life.

### TV Control Setup: Brand Search

The remote control can also be programmed to operate certain functions of your TV set. To program this functionality, perform the following instructions in sequence. In case of a mistake, the process can be exited at any point by pressing and holding the **Text/SHIFT** button and then at the same time pressing the **STOP** button. The remote control will revert to normal operation and no TV brand code will be stored.

1. Determine the manufacturer of your TV set.
2. Look up the 4-digit manufacturer code supplied in this manual and make a note of this code.
3. Make sure your TV set is turned on. (The set-top box does not need to be turned on to perform this programming feature.)
4. Press and hold both the **1** and the **3** buttons at the same time on the remote control for approximately 3 seconds until the TV standby button remains lit, then release both buttons.

*(continued on back page)*

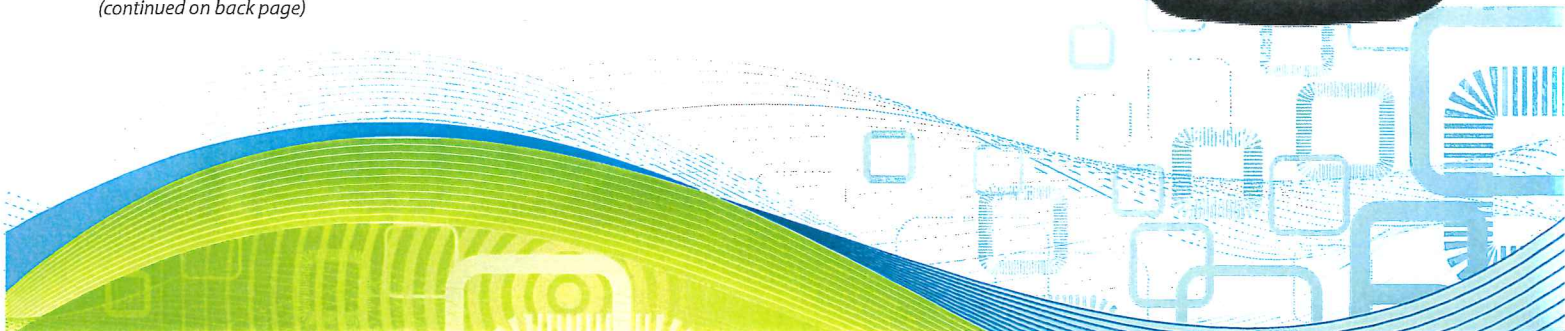



# AMINO REMOTE FOR AMINO SET TOP BOXES

(continued)

5. Now enter the 4 digit manufacturer code for your TV set. On each digit entry, the TV standby button will flash. On entry of the 4th digit, the TV standby button will flash then remain lit.

6. Point the remote control at the TV set and press and hold down the **TV Standby** button or the **Mute** button on the remote control.

7. When the TV either turns off or brings up the MUTE symbol on the screen, then release that button. This may take a few minutes to happen.

8. Press and hold the **Text/SHIFT** button and then at the same time, press the **STOP** button to finish setting up the TV control mode.

The **TV Standby** button will go out. The TV control function is now programmed into the remote control. The following buttons should now operate the TV set: **TV Standby, AV Source Select, Volume Up, Volume Down, Mute**

Should the TV model be changed and the remote control requires re-programming, repeat the above setup procedure with the new TV.

Should the TV brand not be successfully found by the remote control, then the **TV Standby** button will flash rapidly and the remote control will revert to normal operation. No TV brand code will be stored.

## TV Control Setup: Auto Search

Should the TV brand not be successfully found by the previous **Brand Search** method, then **Auto Search** can be used.

**Caution:** *This process may take a long time to find your TV code (in cases up to 5 minutes).*

Make sure your TV set is turned on. (The set-top box does not need to be turned on to perform this programming feature).

1. Press and hold both the **1** and **3** buttons at the same time on the remote control for approximately 3 seconds until the **TV Standby** button remains lit, then release both buttons.

2. Point the remote control at the TV set and press and hold down the **TV Standby** button or the **Mute** button on the remote control.

3. When the TV either turns off or brings up the **MUTE** symbol on the screen, the release that button. This may take up to 5 minutes to happen.


4. Press and hold the **Text/SHIFT** button and then at the same time press the **STOP** button to finish setting up the TV control mode. The **TV Standby** button will go out. The TV control function is now programmed into the remote control.

Should the TV brand not be successfully found by the remote control, then the **TV Standby** button will flash rapidly and the remote control will revert to normal operation. No TV brand code will be stored.

If neither **Brand Search** or **Auto Search** will successfully set up operation of the TV set, then the remote is unable to control that particular TV set.



# OVERVIEW REMOTE CONTROL

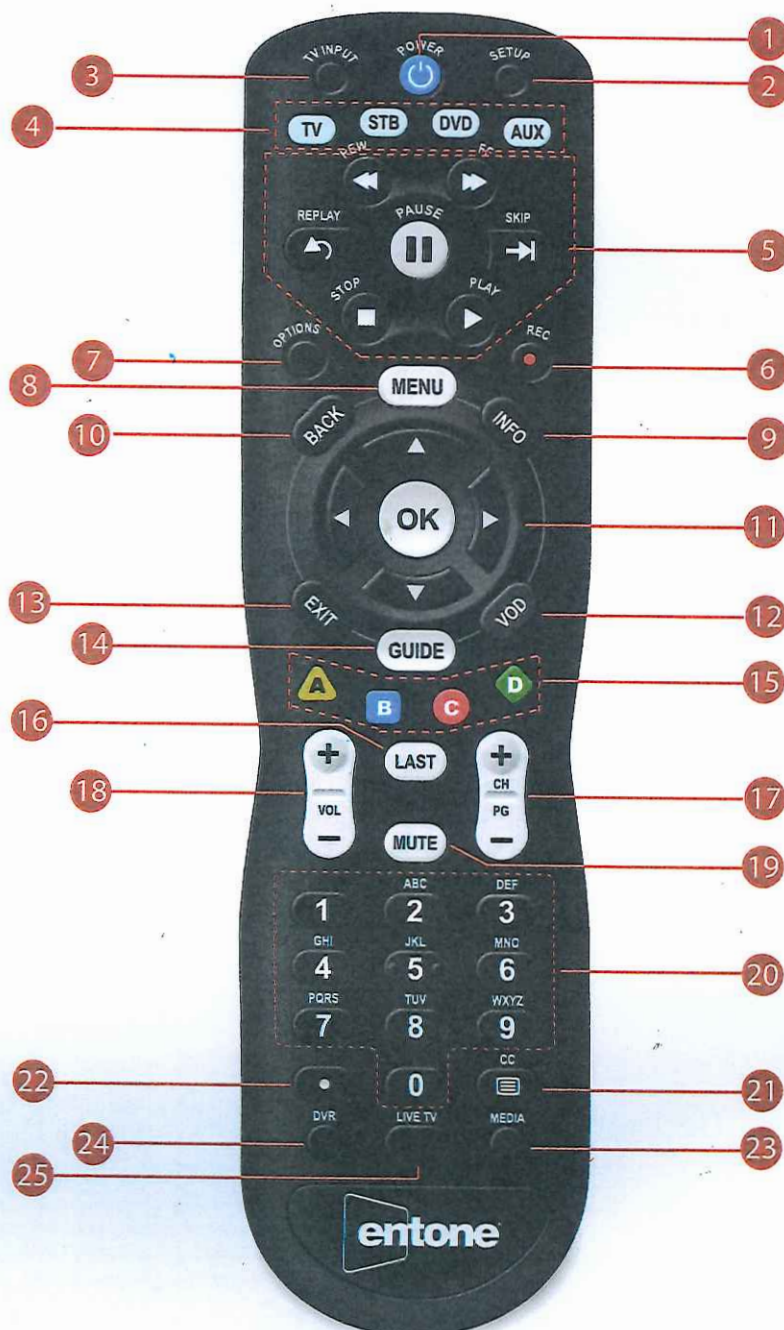

Button(s)	Description
1 POWER	Switches the power on/o for the currently selected device Switches STB to power on or standby mode
2 SET UP	Set up remote for TV
3 TV/ INPUT	Changes the current A/V input of the selected device programmed (i.e. TV or AUX)
4 DEVICE CONTROL	TV: Select to control TV (if programmed) STB: This button is pre-programmed to control the Entone device DVD: Select to control DVD (if programmed) AUX: Select to control another device (if programmed)
5 TRANSPORT KEYS	Controls video program for LIVE TV / DVR / VOD REPLAY: Goes back approx. 30 seconds REW: Rewinds video FF: Fast forwards video SKIP: Advances ahead in 30 second increments PAUSE: Pauses video PLAY: Plays video or resumes a paused program STOP: Stops playback of video
6 REC	Starts or stops recording a program
7 OPTIONS	Provides additional options for certain on-screen menu or highlighted item*
8 MENU	Displays on-screen menu or home screen
9 INFO	Displays on-screen information about the current TV / VOD / DVR program
10 BACK	Goes back one level within menus *
11 NAVIGATION	ARROW KEYS: Navigates within the on-screen guide/menus OK: Executes the currently selected menu option LEFT/RIGHT: Rewinds/Fast forwards video
12 VOD	Feature enabled by your service provider (contact service provider for details)
13 EXIT	Exits the current menu item or back to LIVE TV
14 GUIDE	Displays the on-screen program guide

Availability of certain features is dependent on your service provider

Button(s)	Description
15 SHORTCUT	Color-code buttons correspond to features that are enabled by your service provider (contact service provider for details)
16 LAST	Changes channel to the previously viewed channel
17 CH/PG	Changes channel up/down or pages up/down within the on-screen program guide
18 VOL +/-	Increases or decreases TV volume
19 MUTE	Turns TV volume on/off
20 NUMBER KEYS	Allows direct access to specific channels and menu items
21 CC	Toggles closed captioning on/off
22 DOT	Used when entering a period in certain channels Displays on-screen keyboard for certain applications
23 MEDIA	Feature enabled by your service provider (contact service provider for details)
24 LIVE TV	Feature enabled by your service provider (contact service provider for details)
25 DVR	Feature enabled by your service provider (contact service provider for details)

Availability of certain features is dependent on your service provider

## CONTROLLING YOUR DEVICES

The Nova remote control can be used to control other devices (e.g. TV) as well. It uses InfraRed (IR) light signals to control other devices. IR signals travel only short distances (10 meters or less), and cannot go through walls or other solid objects. You must point the remote directly at these devices, with no objects blocking the line of sight.





## PROGRAM REMOTE TO CONTROL YOUR DEVICES

You can program the Nova to control other devices by

1. Locate the device code for your device in the Device Codes table provided in the Appendix starting on page 11. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search on page 7.
2. Turn on your device.
3. On the remote control, press the Device Control key (TV / STB / DVD / AUX) to choose the device mode.
4. Press and hold the "SETUP" key until the LED blinks twice.
5. Enter the five-digit device code for your device. If you perform this procedure correctly, the LED will blink twice. Otherwise, it has a long blink.
6. Press "Power" key. If your device turns off, setup is complete.
7. If your device does not turn off, repeat this procedure using the next code for your device brand.

Record working codes here

TV code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
DVD code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
AUX code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

## AUTO SEARCH PROCEDURES

If your device does not respond to the remote control after trying all device codes listed for your brand, or if your brand is not listed, try searching for your device code as follows:

1. Turn on your device.
2. On the remote control, press the corresponding Device Control key (TV / DVD / AUX) to choose the device mode.
3. Press and hold "SETUP" key until the LED blinks twice.
4. Press number keys "9" - "9" - "1".
5. Press "Power" key.
6. Press "CH +" key repeatedly until your device turns off.
7. Press and hold "SETUP" key until LED blinks twice to save the working code.