


# Remote Control

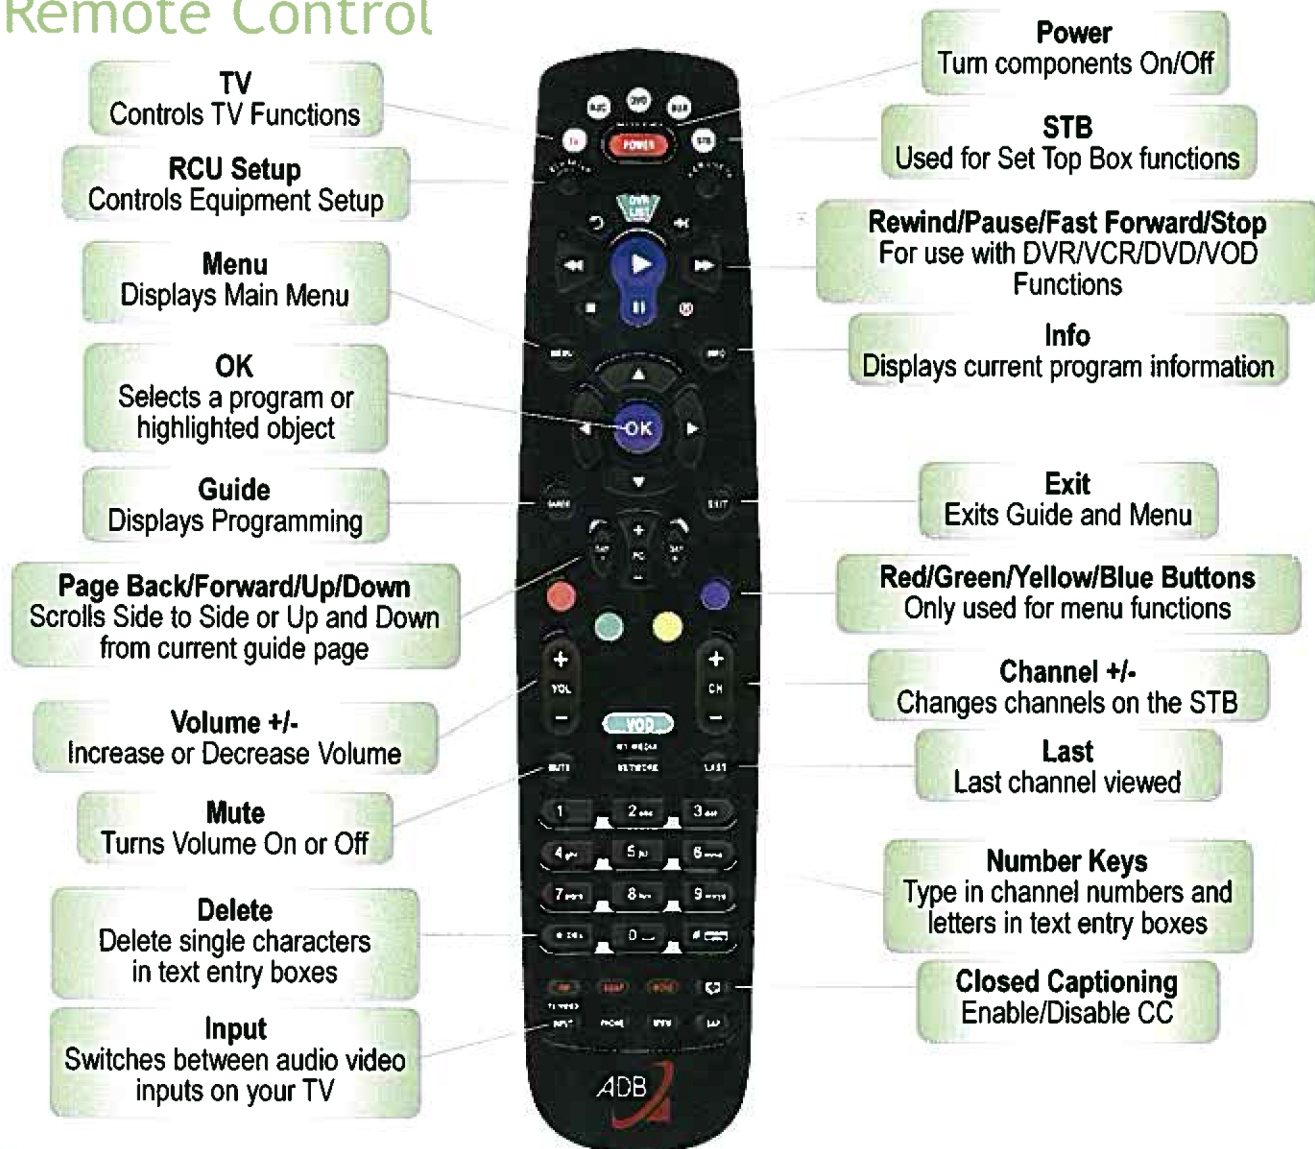

## Turning ON and OFF Television

To turn on TV press **TV** then **Power**.  
Repeat to turn TV off.  
Press **STB** to control the Set Top Box.

## Turning ON and OFF Set Top Box (STB)

Press the **STB** button on your remote control and then press **Power**. Repeat to turn STB off.  
Programming will appear on TV when the STB is on.  
A red LED light illuminates indicating the STB is off.

## The Learning Method

You can transfer the information from the **FACTORY ISSUED** remote to the ADB remote (power, volume, etc.) and bypass the Code Search Method.

Press the **RCU SETUP** until the last selected mode button blinks twice (TV, DVD, etc.).  
Enter in **9 7 5**.  
Press the **TV** button.  
Press the button you wish to program (i.e. **POWER**) on the ADB remote.  
Place the ADB remote and the **ORIGINAL** remote head-to-head about 2 inches apart.  
Press and **HOLD** the **SAME** button (i.e. **POWER**) on the **ORIGINAL** remote.  
The ADB remote **TV** button will blink rapidly and turn off.  
Keep holding the button on the **ORIGINAL** remote until the **TV** button on the ADB remote blinks twice.

\*If the learning failed, the TV button will emit one long blink. Repeat step 6. If you are still not successful, use the Code Search Method.

## Code Search Method

Press and release the **TV** button.  
Press and **HOLD** the **RCU SETUP** until the **TV** button blinks twice.  
Enter **9 9 1** and the **TV** button will blink twice.  
Aim the remote at the TV and press and release the **POWER** button.  
Press and release the **CH+** or **CH-** until the TV turns off.  
Press the **POWER** button to turn the TV on.  
Press the **RCU SETUP** button to store the code for the TV.  
The **TV** button will blink twice.  
The remote is now ready to operate the tv.

## Volume (Use with Code Search Method)

Press and release the **TV** button.  
Press and **HOLD** the **SETUP** until the **TV** button blinks twice.  
Enter **9 9 3**.  
Press and release the **TV** button until it blinks twice.  
The remote should now be ready to control the **Volume +/-** and the **Mute** regardless of what "mode" you are in (i.e. TV, STB, etc.).